


OPERATION MANUAL

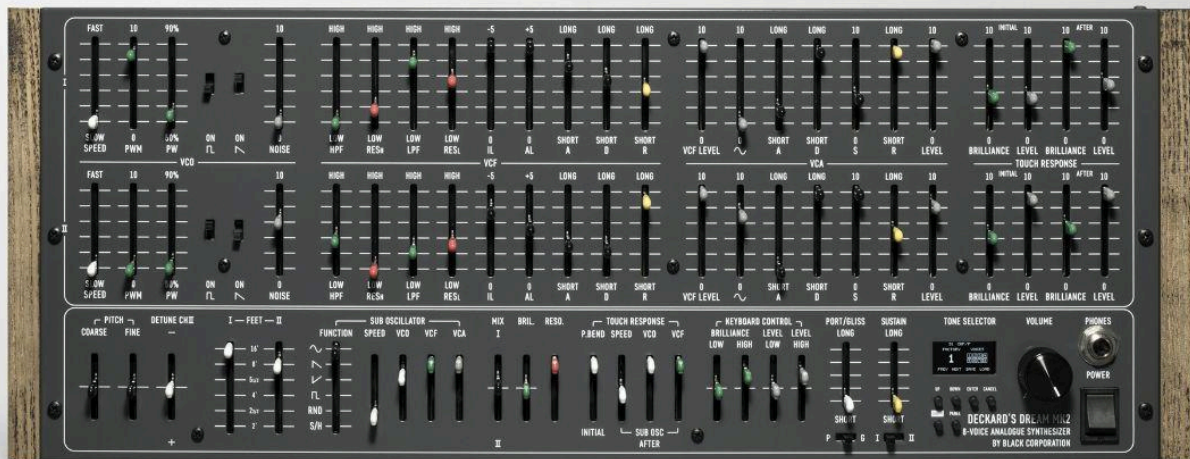

DECKARD'S DREAM MK2

8-VOICE ANALOG SYNTHESIZER
BY BLACK CORPORATION

2.3.0

FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

EUROPEAN UNION REGULATION COMPLIANCE STATEMENT

This product complies with the Low Voltage Directive 2006/95/EC and the Electromagnetic Compatibility Directive 2004/108/EC. The product meets the requirements of RoHS 2 Directive 2011/65/EU.

This product must be disposed of properly according to local laws and regulations.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of a polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

TABLE OF CONTENTS

INTRODUCTION	6
PACKAGE CONTENTS	6
OVERVIEW & FEATURES	7
SYNTHESIZER FEATURES	7
ARCHITECTURE	7
MASTER CONTROLS	7
DISPLAY & CONNECTIONS	8
PHYSICAL SPECIFICATIONS	8
PANEL LAYOUT	9
SETUP & CONNECTIONS	13
POWER	13
AUDIO/HEADPHONES OUTPUT	13
MIDI CONNECTIONS	13
DIN MIDI	13
USB MIDI	13
CONTROL VOLTAGE (CV) MODULATION (MK1 Only)	14
BANKS & PRESET SELECTION	15
PATCH BANK OVERVIEW	15
SELECTING BANKS	16
SELECTING PATCH PRESETS	16
SAVING PATCH PRESETS	16
EDITING PATCH PRESETS	17
BACKING UP PATCH PRESETS	17
PANEL MODE	17
PATCH PROGRAMMING	18
TERMINOLOGY	18
SLIDER BEHAVIOR	18
ARCHITECTURE	18
LAYER I / LAYER II SYNTHESIS PARAMETERS	20
VOLTAGE CONTROLLED OSCILLATOR (VCO)	20
SPEED (FAST=Max/SLOW=Min)	20
PWM (10=Max/0=Min)	20
PW (90%=Max/50%=Min)	21
SQUARE Waveform Switch (Top=OFF/Bottom=ON)	21
The SPEED, PWM, and PW parameters will not have an effect if this switch is in the off position.	21
NOISE (Top=Max/Bottom=Min)	21
VOLTAGE CONTROLLED FILTER (VCF)	22
HPF (Top=Max/Low=Min)	22
RESH (HIGH=Max/LOW=Min)	22
LPF (HIGH=Max/LOW=Min)	22
RESL (HIGH=Max/LOW=Min)	23
IL (-5=Max/0=Min)	23
AL (+5=Max/0=Min)	23

A (LONG=Max/SHORT=Min)	23
D (LONG=Max/SHORT=Min)	23
R (LONG=Max/SHORT=Min)	24
VOLTAGE CONTROLLED AMPLIFIER (VCA)	24
SINE Waveform (10=Max/0=Min)	24
A (LONG=Max/SHORT=Min)	25
D (LONG=Max/SHORT=Min)	25
S (10=Max/0=Min)	25
R (LONG=Max/SHORT=Min)	25
TOUCH RESPONSE	26
SUB-OSCILLATOR	30
FUNCTION	30
TOUCH RESPONSE	33
KEYBOARD CONTROL	35
PORTAMENTO / GLISSANDO	37
TONE SELECTOR	39
ACCESSING THE SETTINGS MENU	41
RETUNE	41
MIDI	41
CC74 REPLACE (GLOBAL)	42
SLIDERS (GLOBAL)	43
MOD WHEEL DESTINATION (PER-PATCH)	44
MICROTUNING	49
KEYBOARD	50
CALIBRATION	51
ABOUT	52
RESET SETTINGS (GLOBAL)	53
FIRMWARE UPDATE PROCEDURE	53
MIDI CC CHART	54

INTRODUCTION

Thank you for purchasing a DECKARD'S DREAM MK2 Analogue Polyphonic Synthesizer! The unique structure and layout of DECKARD'S DREAM is one which welcomes hands on performance resulting in expressive and cinematic sonic explorations. When unpacking your DECKARD'S DREAM, check to make sure all of the following contents are present, and nothing has been lost or damaged in shipping. It may be helpful to save the packaging to protect the unit when transporting it. If you have any questions about its operation, feel free to contact us at support@black-corporation.com. We hope that DECKARD'S DREAM MK2 will bring you many years of inspiration, excitement, and adventure!

This guide, in general should serve as a manual for DECKARD'S DREAM MK2, however also covers most functions of DECKARD'S DREAM MK1. Operationally, MK2 has three additional controls on it's front panel: A switch between Sustain Mode I and II (In MK1, can be configured in SETTINGS -> VOICE menu), a global Sustain Slider (controllable by CC messages), and a dedicated button to switch to PANEL (PNL) Mode (SHIFT+ENTER on MK1). Other differences, mainly associated with Firmware revisions and updates will be addressed near the end of this manual.

PACKAGE CONTENTS

When unpacking your DECKARD'S DREAM MK2, check to make sure all of the following contents are present, and nothing has been lost or damaged in shipping. It may be helpful to save the packaging to protect the unit when transporting it. If you have any questions, feel free to contact us at support@black-corporation.com.

The following applies to pre-built DECKARD'S DREAM MK2 units only.

DECKARD'S DREAM MK2 ships with the following items:

- DECKARD'S DREAM MK2 Desktop Analogue Synthesizer (wood cheeks attached)
- 12.0V 2.5A 30W power supply with US, EU, UK, and AU local adapters
- Rack Ears and Mounting Screws (Caution: Please use the screws provided or you could damage your unit!)
- 4 Self-Adhesive Felt Pads
- Black Corporation Logo Stickers

OVERVIEW & FEATURES

DECKARD'S DREAM is an 8-voice, dual-layered polyphonic analogue synthesizer inspired by the iconic CS-80, a dramatically cinematic synthesizer of the late 1970s and early 1980s, a time before digital and FM synthesis became dominant. It's not a clone of those legendary machines, but rather a revival of a unique palette of sound design that was somewhat forgotten when newer technologies emerged. By revisiting the creative concepts of that era using today's readily accessible technology, DECKARD'S DREAM offers a remarkable level of expressive control for musicians.

SYNTHESIZER FEATURES

- 8-voice polyphonic analogue synthesizer
- Fully analogue signal path
- 2 synthesis layers per voice
- 1152 presets

ARCHITECTURE

- Voltage controlled oscillator (VCO) with square, saw and sine waveforms
- Pulse width modulation (PWM) with sine-wave low frequency oscillator (LFO)
- Manual pulse width (PW) (50-90%)
- 12dB high-pass (HP) and low-pass (LP) discrete voltage-controlled filters (VCF) with individual resonance controls
- Attack/Decay/Release (ADR) filter envelope with adjustable initial and attack levels
- ADSR voltage-controlled amplifier (VCA) envelope
- Velocity and aftertouch controls for filter brilliance and volume levels

MASTER CONTROLS

- Global coarse / fine tune
 - VCO2 detune
 - LFO with sine, saw, ramp, square and stepped random waveforms
 - LFO destinations: VCO, VCF, VCA
 - Crossfade between layers 1 and 2
 - Global filter brilliance and resonance control for additional resonance
 - Polyphonic aftertouch destinations: LFO speed, LFO to VCO amount, LFO to VCF amount, filter brilliance, volume level
 - Keyboard tracking adjustment for VCF and VCA
- ### CONTROLS
- MIDI/MPE with polyphonic aftertouch
 - Polyphonic pitch-bend
 - Unison mode with detune

- MIDI over USB
- 128 factory presets and 8 user banks. (User banks 1-3 come pre-loaded with presets)
- Alternate scales and tunings


DISPLAY & CONNECTIONS

- 128×64 OLED display
- DC input jack (12V/2A)
- USB jack (type B)
- MIDI IN jack (DIN5)
- MIDI THRU jack (DIN5)
- MIDI OUT jack (DIN5)
- AUDIO OUT jack (1/4 inch balanced MK2.3 and later, previously unbalanced)

PHYSICAL SPECIFICATIONS

- 19" 4U rack-mount
- Width: 461mm / 18.15"
- Height: 178mm / 7"
- Depth: 50mm / 1.97"
- Weight: ~ 2.35 kg / 5.17 lbs

PANEL LAYOUT

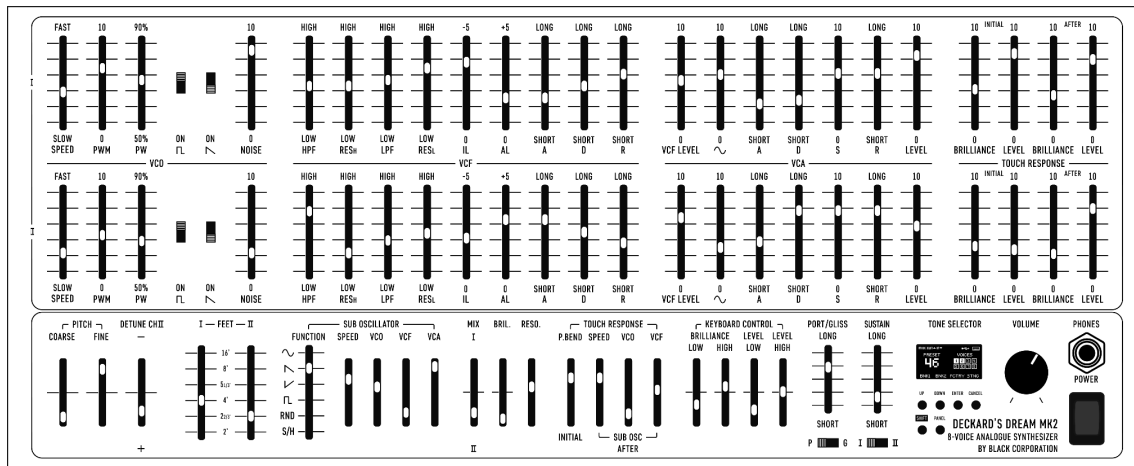

*Layer I and Layer II Controls 1 – 26 are identical.

- SPEED (PWM LFO Speed):** Controls the speed of the PWM LFO on the Pulse Wave. Minimum and maximum speeds can be adjusted in the TIME menu.
- PWM (PWM LFO Amount):** Determines the amount of pulse width modulation, from 0 to 10.
- PW (Manual PW Setting):** Manually sets the pulse width from 50% (square wave) to 90% (thin pulse wave). If the PWM LFO amount is set to a non-zero value, this setting determines the center pulse width.
- Square/Pulse Wave On/Off:** Determines whether the square/pulse wave (depending on the PWM settings) is turned on (switch down) or off (switch up).
- Saw Wave On/Off:** Determines whether the saw wave is turned on (switch down) or off (switch up).
- Noise (Level):** Determines how much of the noise generator signal is mixed in.
- HPF (Cutoff):** High pass filter cutoff. Set to Low, the filter is completely open. Set to High, the filter lets through only the highest frequencies.
- RESH (HPF Resonance):** High pass filter resonance. Does not self-oscillate at max setting.
- LPF (Cutoff):** Low pass filter cutoff. Set to Low, the filter is completely open. Set to High, the filter lets through only the highest frequencies.
- RESL Resonance:** Low pass filter resonance. Does not self-oscillate at maximum setting.
- IL (Initial Level):** Sets the start of the filter envelope relative to the cutoff frequency of the filter. The filter cutoff will be modulated starting with a frequency lower than the **HPF/LPF** cutoff settings. The more IL is increased (max -5), the lower the starting frequency will be. Note: The HPF envelope polarity can be changed via the HPF MOD setting under the VOICE menu.
- AL (Attack Level):** Sets the maximum level attained by the filter envelope, the peak of the Attack phase. This can also be loosely regarded as the “envelope amount.” Note: The HPF envelope polarity can be changed via the HPF MOD setting under the VOICE menu.

13. **A (Attack)**: Filter envelope attack length.
14. **D (Decay)**: Filter envelope decay length.
15. **R (Release)**: Filter envelope release length.
16. **VCF Level**: Determines how much of the oscillator/noise → VCF signal to let through. When set to minimum, the only possible remaining sound source for this layer is the sine wave (see 17).
17. **Sine Wave Level**: Adds the pure sine wave component of this layer's oscillator, which is unaffected by the VCF filtering stages.
18. **A (Attack)**: VCA attack time.
19. **D Decay**: VCA decay time.
20. **Sustain**: VCA sustain level.
21. **Release**: VCA release level.
22. **LEVEL (Layer Volume)**: Controls the overall volume of this layer, useful for balancing with layer II. Note: Balance between the two layers can also be controlled via the "MIX I / II" slider (see 37).
23. **Initial Touch Response Brilliance**: Determines how much this layer's VCF cutoff is affected by keydown velocity. Note: Setting this slider to a different value than its layer II counterpart can produce sonically interesting and expressive results.
24. **Initial Touch Response Level**: Determines how much this layer's volume (VCA) level is affected by keydown velocity. Note: Setting this slider to a different value than its layer II counterpart can produce sonically interesting and expressive results.
25. **Aftertouch Response Brilliance** - How much this layer's VCF cutoff is affected by key pressure. Note: Setting this slider to a different value than its layer II counterpart can produce sonically interesting and expressive results.
26. **Aftertouch Response Level** - Determines how much this layer's volume (VCA) level is affected by key pressure. Note: Setting this slider to a different value than its layer II counterpart can produce sonically interesting and expressive results.
27. **Coarse Pitch**: Controls overall coarse pitch (both layers I and II).
28. **Fine Pitch**: Controls overall fine pitch (both layers I and II).
29. **Detune CH II**: Determines how much layer II's oscillator is detuned from layer I. Produces a full / thick / beating sound between the layer I and II oscillators.
30. **FEET Layer I Octave / Fifths Selector**: Similar to organ stops. Octave below (16'), default range (8'), a fifth above (5 1/3'), an octave above (4'), a fifth and an octave above (2 1/3'), two octaves above (2').
31. **FEET Layer II Octave / Fifths Selector**: Operates similarly to the layer I octave / fifths selector.
32. **Sub-Oscillator (LFO) Waveform Selector**: Selects sine, saw, ramp, square, random ("Sample & Hold"), or External (MK1 only), which uses the CV signal coming into the External input jack on the rear panel.
33. **Sub-Oscillator (LFO) speed**: Controls the global LFO's frequency: The lower the slider, the faster the LFO modulation.
34. **Sub-Oscillator (LFO) VCO mod**: Controls how much the layer I and II VCOs are modulated by the global LFO (i.e. vibrato). The lower the slider, the more modulation.

35. **Sub-Oscillator (LFO) VCF mod:** Controls how much the LAYER I and II VCFs are modulated by the global LFO (a kind of tremolo). The lower the slider, the more modulation.
36. **Sub-Oscillator (LFO) VCA mod:** Controls how much the layer I and II VCAs are modulated by the global LFO (i.e. tremolo). The lower the slider, the more modulation.
37. **Mix I / II:** With slider all the way up, only layer I is heard. With slider all the way down, only layer II is heard. With the slider in the middle, layer I and II are mixed equally. Note: the layer I and II volumes can also be affected by their respective LEVEL and VCF LEVEL sliders.
38. **BRIL (Global Brilliance):** Adjusts the VCF cutoff of all filters simultaneously (HPF and LPF cutoff on both layers I and II).
39. **RESO (Global Resonance):** Adjusts the VCF resonance of all filters simultaneously (HPF and LPF resonance on both layers I and II).
40. **Initial Touch Response Pitch Bend:** Introduces a “glide up to the note” effect. This slider controls the amount of “glide up”, depending on keydown velocity. Slider pdown = maximum sensitivity. With higher slider settings, this can introduce very subtle and sonically interesting colors to each patch. The range of this effect can be adjusted in SETTINGS -> KEYBOARD.
41. **Aftertouch Response Sub-Osc Speed Control:** This slider controls how much the key pressure speeds up the global LFO. Slider all the way down = maximum speed-up effect. Combined with sliders 42, 43, and the layer I and II Aftertouch, Brilliance, and Level sliders, this can have expressive effects, similar to the way a virtuoso violinist might add emotion to their playing by simultaneously increasing the vibrato/tremolo level, vibrato/tremolo speed, and overall bow force / volume of the note.
42. **Aftertouch Response Sub-Osc VCO mod:** Slider controls how much the key pressure affects the LFO → VCO modulation (i.e. vibrato). Slider all the way down = maximum sensitivity.
43. **Aftertouch Response Sub-Osc VCF mod:** Slider controls how much the key pressure affects the LFO->VCF modulation. Slider all the way down = maximum sensitivity.
44. **VCF Keyboard Follow:** Sets how the VCF cutoff is affected by how high or low on the keyboard a key is played. For example, setting the LOW slider all the way up and the HIGH slider all the way down will cause the VCFs to be more open at the top range of the keyboard and more closed at the bottom range.
45. **Keyboard Control Brilliance and VCA Level Keyboard Follow:** Sets how the VCA level is affected by how high or low on the keyboard a key is played. For example, setting the LOW slider all the way up and the HIGH slider all the way down will cause the VCAs to be louder at the top range of the keyboard and quieter at the bottom range.
1. **PORT/GLISS (Portamento / Glissando Time):** Controls how fast or slow the glide or glissando operates (depending on which was selected with switch 49).
2. **P/G Switch (Portamento / Glissando):** When switched to the left, there is a smooth glide between notes (speed determined by slider 48). When switched to the right, the glide is quantized into discrete semitones, simulating a fast (or slow) play of all black and white keys between the last and current note. Note: The glide / gliss behavior, especially with slow-release patches, is slightly different depending on whether voice playback mode Sustain I or Sustain II is selected.
3. **SUSTAIN (MK2 Only):** Master sustain control which can be used to quickly change the release for both layers. Functions independently of the VCA release controls.

4. **SUSTAIN I / II Switch (MK2 Only):** Sets playback mode to determine how the sustain of notes or chords is handled when new notes or chords are played.
 - **SUSTAIN I:** All notes sustain and release independently regardless of other notes or chords played, and each note has the same release time. This mode is also called “round-robin” voice assignment.
 - **SUSTAIN II:** Notes or chords will be cut off by any new notes or chords played (unless held down). The last notes or chords played will carry the sustain and release. This setting can have a dramatic effect if portamento or glissando is enabled. This setting is a unique feature of the CS-80 and is musically useful especially with slow-release patches, making it possible to play monophonic / legato leads with the right hand while holding down chords with the left.
1. **Menu / Preset Navigation Buttons** (see TONE SELECTOR BUTTONS section of the manual)
2. **Master Volume Knob:** controls volume for both the headphone jack and the Audio Out jack in the rear of the unit.

SETUP & CONNECTIONS

POWER

Insert the barrel end of the power supply into the input labeled **POWER** on the back of the unit. Plug the other end of the power supply into an AC outlet. Note that it may take a few minutes for the oscillators to reach stable tuning.

AUDIO/HEADPHONES OUTPUT

DECKARD'S DREAM's audio output jack is balanced monaural (MK2.3 and higher). Turn the **VOLUME** knob to minimum (fully counter-clockwise) before connecting an audio cable. Insert one end of a 1/4 inch instrument cable into the jack labeled **AUDIO OUT** on the back of the unit, and the other end into a powered amplifier or the input of an audio mixer. Now carefully adjust the volume level by turning the **VOLUME** knob clockwise.

The **HEADPHONES** output is a stereo output that duplicates the synthesizer's mono output to both the left and right channels. Like the **AUDIO OUT** jack, the **HEADPHONES** output is controlled by the **VOLUME** knob. Turn the **VOLUME** knob to minimum before inserting a headphone cable, then adjust volume to appropriate level.

MIDI CONNECTIONS

Because DECKARD'S DREAM has no onboard keyboard or sequencer, an external MIDI controller must be used to control the unit. DECKARD'S DREAM can be controlled with standard hardware MIDI controllers, or for more expressivity, a polyphonic aftertouch controller or MIDI Polyphonic Expression (MPE) controller. See the *SETTINGS* section of the manual for information on how to configure the unit for each type of controller.

DECKARD'S DREAM can also be controlled by external hardware sequencers, or via automation over USB in a Digital Audio Workstation (DAW).

DIN MIDI

To control DECKARD'S DREAM with a controller that uses a DIN5 MIDI output, connect a MIDI cable from the output of the controller to the jack labeled **MIDI IN** on the back of the unit.

If desired, MIDI signals can be passed through the unit to another device by connecting a MIDI cable to the jack labeled **MIDI THRU** on the back of the unit to the MIDI input of another device.

USB MIDI

To control DECKARD'S DREAM with a computer, use a USB-A to USB-B cable. Connect the USB-A end of the cable to a computer, and the USB-B end of the cable to the **USB** input on the back of the unit.

CONTROL VOLTAGE (CV) MODULATION (MK1 Only)

External control voltages (generated by expression pedals, modular synthesizers, or other types of CV equipment) can be used to modulate DECKARD'S DREAM. To use external CV modulation, set the **SUB OSCILLATOR FUNCTION** to **EXT**.

For more detail on how to use the external **SUB OSCILLATOR FUNCTION**, see the *PATCH PROGRAMMING* section of the manual.

The default voltage range for the external CV input is 0-5v. For more information about how to change the voltage range of the input, see the *SETTINGS* section of the manual.

BANKS & PRESET SELECTION



When first exploring DECKARD'S DREAM, it may be helpful to experiment with the factory presets to understand the capabilities of the synthesizer. DECKARD'S DREAM's factory patches have been designed to demonstrate the vast range of capabilities and expressivity the synthesizer is capable of.

To enable the maximum amount of expressivity from DECKARD'S DREAM, make sure the **MIDI MODE** settings are configured to match the connected MIDI controller type. To make sure DECKARD'S DREAM is configured correctly for the connected controller type, see the *SETTINGS* section of this manual:

- For basic MIDI controllers that are not capable of polyphonic aftertouch, and those more advanced ones that are, select the **POLY AFTERTOUCH** setting.
- For MIDI Polyphonic Expression (MPE) controllers such as Expressive E Osmose, ASM Hydrasynth, Roger Linn Linnstrument, or Haken Continuum, select the **MPE** setting.

PATCH BANK OVERVIEW

DECKARD'S DREAM has nine available patch banks:

- **FACTORY:** This patch bank is a curated selection of 128 factory presets designed to demonstrate the range of DECKARD'S DREAM's capabilities.
- **BANK 1:** More patches created by expert sound programmers which showcase the depth of DECKARD'S DREAM.
- **BANK 2:** This bank features recreations of the original 14 CS-80 presets in addition to 114 other new sounds.
- **BANK 3:** The original DECKARD'S DREAM MK1 preset sound bank.
- **USER BANKS 4 - 8:** These User patch banks provide 128 user-editable patch slots each.

SELECTING BANKS

To scroll through the available banks, press and hold the **SHIFT** button and **UP** or **DOWN**.

To begin exploration of DECKARD'S DREAM by building original patches from the panel settings, Press the **PANEL** button (MK2 only, on MK1, press SHIFT+ENTER).

Note: DECKARD'S DREAM responds to standard Program Change and Bank Change MIDI messages. Make sure that CC Receive is turned ON in the MIDI menu. Bank change uses MIDI CC message 0, with the values 0 = User Bank 1, 1 = User Bank 2, and 2 = Factory Bank.

SELECTING PATCH PRESETS

When navigating to a new bank, patch preset 1 will be selected.

To select the next patch preset, press **UP (PREV)**.

To select the previous patch preset, press **DOWN (NEXT)**.

Some MIDI controllers and DAWs are capable of sending Program Change messages.

DECKARD'S DREAM will respond to Program Change messages, allowing for selection of the next, previous, or specific patch numbers from the current bank, or from a different bank entirely.

SAVING PATCH PRESETS

DECKARD'S DREAM has 1,024 editable patch presets total. Patches can be saved in the banks labeled BANK 1 through BANK 8. BANKS 1-3 come with patches loaded, however can be written over. Each bank has 128 editable patch presets.

Saved patches store the following values:

- All front panel slider and switch positions
- All non-global **MIDI** settings:

To save/overwrite a patch in the current preset memory location:

1. Press **ENTER (SAVE)**. The Active Voices display will be replaced by the word **SAVE** to confirm DECKARD'S DREAM is in Save mode.
1. Press **ENTER (SAVE)** again. The patch has been saved, overwriting the previous values of that preset.

To save/overwrite a patch in a new preset memory location of the current bank:

1. Press **ENTER (SAVE)**. The Active Voices display will be replaced by the word **SAVE** to confirm DECKARD'S DREAM is in Save mode.
2. Press **UP (PREV)** or **DOWN (NEXT)** to navigate to the desired preset memory location to save the new patch to. Be certain to save the patch in the correct location, as the previous values will be overwritten when the save process is complete.
3. Press **ENTER (SAVE)** a second time. The patch has been saved, overwriting the previous values of that preset.

To save/overwrite a patch in a different bank:

1. Hold the **SHIFT** Button and select the desired bank by pressing **UP (BNK1)** or **DOWN (BNK2)**.
2. Press **ENTER (SAVE)**. The Active Voices display will be replaced by the word **SAVE** to confirm DECKARD'S DREAM is in Save mode.
3. Press **UP (BNK-)** or **DOWN (BNK+)** to navigate to the preset memory location to save to. Be certain to save the patch in the correct location, as the previous values will be overwritten when the save process is complete.
4. Press **ENTER (SAVE)** a second time. The patch has been saved, overwriting the previous values of that preset.

EDITING PATCH PRESETS

Once a patch has been saved to BANKs 1 or 2, it can be edited at any time by recalling it and adjusting the buttons and knobs or patch-specific settings until the desired sound is reached.

Once adjustments have been made to taste, save the preset to the bank and preset as desired.

BACKING UP PATCH PRESETS

By powering up DECKARD'S DREAM in USB Drive Mode, patch files may be backed up to a computer for later retrieval.

To place DECKARD'S DREAM in USB drive mode and store patches:

1. If DECKARD'S DREAM is powered on, power it off.
2. Connect a USB cable from a computer to DECKARD'S DREAM's USB port.
3. Hold **SHIFT** while powering on DECKARD'S DREAM. DECKARD'S DREAM's display will show a USB symbol in place of the normal menu options.
4. DECKARD'S DREAM should now display in the computer's file navigation as an external drive.
5. Copy the files labeled dd_bank_1.p and dd_bank_2.p to the desired folder on the computer.
6. Eject the USB drive from the computer before powering down DECKARD'S DREAM.
7. Power down DECKARD'S DREAM, disconnect the USB cable, then power it back on to return to the synth's normal operations.

PANEL MODE

Panel Mode is available to bypass all presets and create patches based on the current positions of all knobs and switches on the front panel. While DECKARD'S DREAM cannot initialize patches to a default state, panel mode can create patches from panel settings, which can be saved to any location.

To use DECKARD'S DREAM in Panel Mode, press the alternatively, hold **SHIFT** and **ENTER** simultaneously. The display now reads **PNL**.

To exit panel mode, press **PANEL** or **SHIFT+ENTER**, or simply navigate to a saved patch.

PATCH PROGRAMMING

TERMINOLOGY

DECKARD'S DREAM uses some terminology inspired by CS-80 that may be unfamiliar in modern synthesis:

- **LAYER I/LAYER II:** DECKARD'S DREAM features two independent synthesis layers with identical controls, allowing for more complex patches than single-layer analogue polyphonic synthesizers.
- **BRILLIANCE:** This term is synonymous with *voltage-controlled filter cutoff frequency*.
- **SUB OSCILLATOR:** This term is synonymous with *low-frequency oscillator*.
- **tone selector:** This term is used on the front panel to label DECKARD'S DREAM's patch selection and settings menu screen.
- **INITIAL:** This term is used to describe DECKARD'S DREAM's responsiveness to note-on velocity.
- **AFTER:** This term is used to describe DECKARD'S DREAM's responsiveness to aftertouch modulation.
- **FEET:** This term describes an oscillator's pitch using terminology inspired by pipe organs, where a longer pipe creates a lower note, and a shorter pipe creates a higher note.

SLIDER BEHAVIOR

Similar to the CS-80, DECKARD'S DREAM's sliders operate differently depending on the parameter. While all of DECKARD'S DREAM's sliders travel in an up/down direction, some sliders are at their maximum value at the top, while others will be at their maximum value at the bottom.

The description of each individual slider will include a note about where the maximum value of the slider can be found, in the form of **Top=Max/Bottom=Min** or **Top=Min/Bottom=Max**. Max is defined by the end of the slider's travel that has the biggest effect on DECKARD'S DREAM's sound. A small number of sliders and switches on the front panel cannot be described in a Min/Max fashion and will not be labeled this way.

ARCHITECTURE

DECKARD'S DREAM's architecture consists of two independent synthesis layers with identical controls, followed by a master settings section that controls parameters applied across both layers.

This architecture allows for a high level of expressivity, as each of the two synthesis layers can be controlled independently from one another. For each layer, there is independent control over:

- Four waveforms: square, saw, sine (not affected by VCF), and white noise
- Pulse width modulation over the square waveform
- Independent high and low pass voltage-controlled filters (VCFs) with resonance controls
- Initial and After sensitivity controls for the VCF

- Attack/Decay/Release (ADR) envelope for the VCF
- Master and VCF level controls for the voltage-controlled amplifier (VCA)
- Attack/Decay/Sustain/Release (ADSR) envelope for the VCA
- Initial and After sensitivity controls for both Brilliance and Level

The master section controls settings that affect both layers, including:

- Coarse and fine tuning controls for oscillator pitch
- Detuning for the second layer's oscillator, creating thicker sounds
- Tuning controls for each oscillator pitch, described in **FEET**
- A **SUB OSCILLATOR** control section, or LFO, with a variety of shapes, destinations, and modulation intensity
- Master mix, brilliance, and resonance controls
- A **TOUCH RESPONSE** control section, which allows velocity and aftertouch to modulate the **SUB OSCILLATOR**
- A **KEYBOARD CONTROL** section, which allows certain frequency ranges to be emphasized over others in the VCF, functioning as a highly flexible and complex filter key-tracking control
- **PORTAMENTO/GLISSANDO** control, alters how DECKARD'S DREAM responds to new notes
- A **TONE SELECTOR** section with OLED display, allowing control over patch selection and access to the **SETTINGS** menu
- **VOLUME** control


The combination of two independent synthesis layers plus the master settings determines the sound of a patch. Combined, the level of expressivity that can be obtained from DECKARD'S DREAM is expansive. For example, combine a sound with a sharp, sudden transient on layer one with a slow-building pad on layer two to achieve slowly evolving sounds not possible on analogue synthesizers with only a single VCF and VCA per voice.

LAYER I / LAYER II SYNTHESIS PARAMETERS

Layer I and Layer II controls are identical and will be described in this manual only once. While the same value can be set independently for each layer, the functionality of each parameter is the same across both layers.

VOLTAGE CONTROLLED OSCILLATOR (VCO)

DECKARD'S DREAM generates three waveforms from a single oscillator per layer: Square, saw, and sine, plus noise from the unit's white noise generator. Note that the sine waveform bypasses the filter section; it is handled by the voltage-controlled amplifier and will be covered in that section.

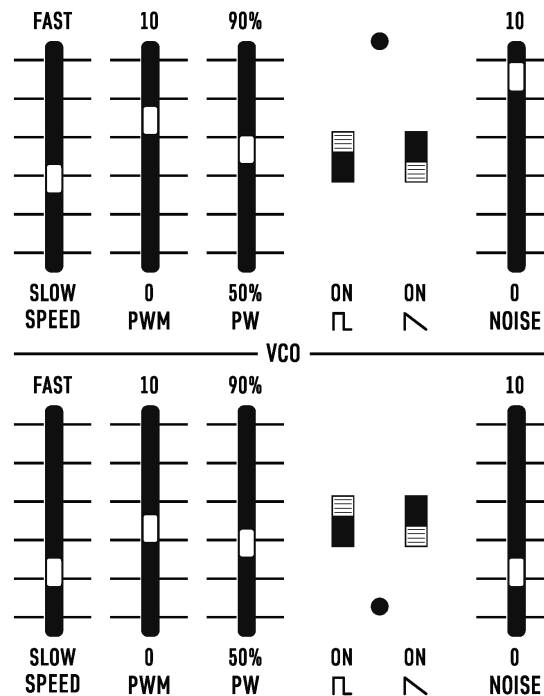

SPEED (FAST=Max/SLOW=Min)

Controls pulse width modulation (PWM) for the square waveform, functioning as an independent LFO control over PWM.

This slider will have no effect if the **PWM** slider is set to 0.

PWM (10=Max/0=Min)

Controls the depth of PWM for the square waveform. With the slider at 0, there is no pulse width modulation. At 10, maximum modulation is achieved.

PW (90%=Max/50%=Min)

Controls the Pulse Width (duty cycle) of the square waveform. The percentage value describes the positive percent of the cycle. At 50%, the positive and negative cycles of the waveform are present in equal amounts. As the value is increased (up to 90%), the positive cycle of the waveform becomes more prominent, altering the timbre of the waveform.

SQUARE Waveform Switch (Top=OFF/Bottom=ON)

Turns the square waveform on or off. When the switch is down, the square waveform is turned on. When the switch is up, the square waveform is turned off.

The SPEED, PWM, and PW parameters will not have an effect if this switch is in the off position.

SAW waveform switch (Top=OFF/Bottom=ON)


Turns the saw waveform on or off. When the switch is down, the saw waveform is turned on. When the switch is up, the saw waveform is turned off.

NOISE (Top=Max/Bottom=Min)

Controls the volume of the white noise source. At 0, no white noise can be heard. At 10, white noise is heard at maximum volume.

VOLTAGE CONTROLLED FILTER (VCF)

This section covers the voltage-controlled filter. DECKARD'S DREAM has separate 12dB/octave (2-pole) low-pass and high-pass filters per layer. Square and saw waveforms (but not sine) and white noise are processed by the VCF's parameters.

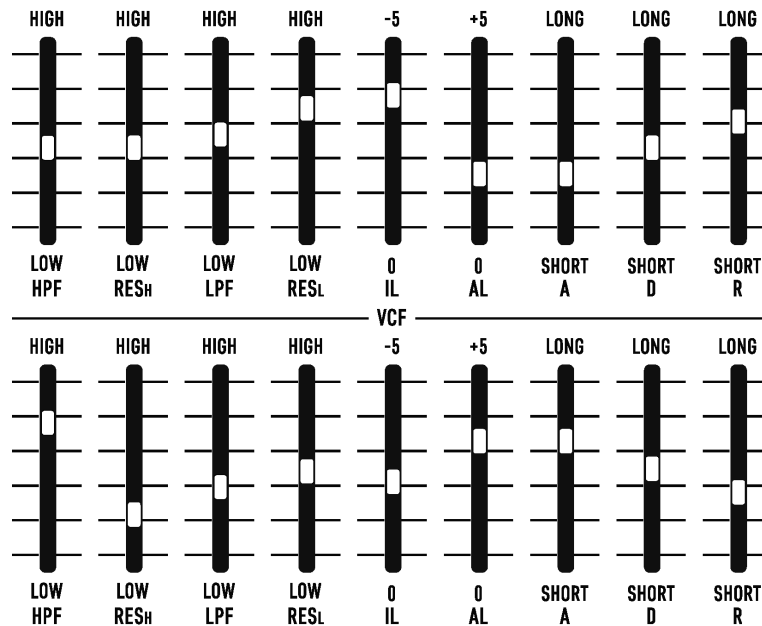

HPF (Top=Max/Low=Min)

HIGH PASS FILTER: Controls the cutoff frequency of the high-pass filter. At the top of the slider, the high-pass filter is closed and lets no frequencies through. At the bottom, the high-pass filter is completely open and lets all frequencies through.

Note that the low-pass filter may be configured to let sound through; setting the slider to the top may not entirely eliminate sound from the layer.

RESH (HIGH=Max/LOW=Min)

RESONANCE HIGH: Controls the depth of resonance (or the point at which the VCF begins to feed back) for the high-pass filter. At the bottom of the slider, no resonance is present. At the top of the slider, the maximum amount of resonance is present.

LPF (HIGH=Max/LOW=Min)

LOW PASS FILTER: Controls the cutoff frequency of the low-pass filter. At the top of the slider, the low-pass filter is open and lets all frequencies through. At the bottom of the slider, the low-pass filter is completely closed and lets no frequencies through.

Note that the high-pass filter may separately be configured to let sound through; setting the slider to the top may not entirely eliminate sound from the layer.

RESL (HIGH=Max/LOW=Min)

Controls the depth of the resonance (or the point at which the VCF begins to feed back) for the low-pass filter. At the bottom of the slider, no resonance is present. At the top of the slider, the maximum amount of resonance is present.

IL (-5=Max/0=Min)

Initial Level: Sets a more filtered starting point for the filter frequency cutoff than the **HPF** and **LPF** slider settings. This results in a thinner sound fading into a fuller sound.

A value of 0 will have no effect. Values above 0 will cause the effect to fade in on note on, allowing fundamentals to sound through while reducing harmonics. The depth of the attack phase is increased as the slider moves toward the top (-5).

The attack of the VCF determines the time the envelope takes to match the values of the **HPF** and **LPF** sliders. Note that if the VCF's attack is set to minimum, these sliders will have no effect.

AL (+5=Max/0=Min)

ATTACK LEVEL: Sets a less filtered starting point for the filter frequency cutoff the **HPF** and **LPF** slider settings. This results in a fuller sound fading into a thinner sound.

A value of 0 will have no effect. Values above 0 will cause the effect to start fade in on note on, allowing harmonics to sound through while reducing fundamentals. The depth of the attack phase is increased as the slider moves to the top (+5).

The attack of the VCF determines the time the envelope takes to match the values of the **HPF** and **LPF** sliders. Note that if the VCF's attack is set to minimum, these sliders will have no effect.

A (LONG=Max/SHORT=Min)

ATTACK: controls the length of attack phase of the VCF's envelope. Attack determines the length of time it takes for the filter to reach its maximum level following note on. This parameter will have no effect if the **IL** and **AL** sliders are at minimum. Moving the slider toward the top results in a longer attack time.

Note that the maximum length of the attack phase can be adjusted in the **TIME** section of the **SETTINGS** menu. For more detail, see that section of the manual.

D (LONG=Max/SHORT=Min)

DECAY: controls the length of the decay phase of the VCF's envelope. Decay determines the time it takes for the filter to reach its steady level following the attack phase. Moving the slider toward the top results in a longer decay time.


Note that the maximum length of the decay phase can be adjusted in the **TIME** section of the **SETTINGS** menu. For more detail, see that section of the manual.

R (LONG=Max/SHORT=Min)

Release: controls the length of release phase of the VCF's envelope. Release determines the length of time it takes for the filter to close after note off. Moving the slider toward the top results in a longer release time.

Note that the maximum length of the attack phase can be adjusted in the **TIME** section of the **SETTINGS** menu. For more detail, see that section of the manual.

VOLTAGE CONTROLLED AMPLIFIER (VCA)

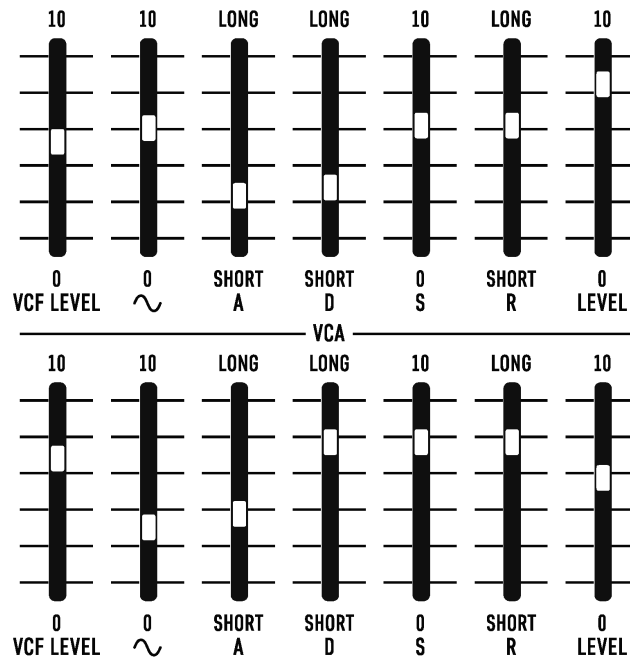

VCF LEVEL (10=Max/0=Min)

Controls the amount of signal passed from the VCF to the VCA. A value of 0 lets no sound through, while moving the slider up (to a maximum of 10) increases the volume passed from the VCF.

SINE Waveform (10=Max/0=Min)

Controls the volume of the sine waveform (generated by the VCF). A value of 0 lets no sound through, while moving the slider up (to a maximum of 10) increases the volume of the sine waveform introduced to the VCA.

Use the **VCF LEVEL** slider in combination with the **SINE** slider to balance the audio at the VCA stage.

A (LONG=Max/SHORT=Min)

ATTACK: Controls the length of the VCA envelope's attack. Attack determines the time it takes for the volume to reach its maximum level following note on. Moving the slider toward the top results in a longer attack time.

Note that the maximum length of the attack phase of the envelope can be adjusted in the **TIME** section of the **SETTINGS** menu. For more detail, see that section of the manual.

D (LONG=Max/SHORT=Min)

DECAY: controls the length VCA envelope's decay. Decay determines the time it takes for the volume to fall from its maximum level, following the attack phase, to the steady level set by the sustain slider. Moving the slider toward the top results in a longer decay time.

Note that the maximum length of the decay phase of the envelope can be adjusted in the **TIME** section of the **SETTINGS** menu. For more detail, see that section of the manual.

S (10=Max/0=Min)

SUSTAIN: controls the VCA envelope's sustain. This stage of the envelope, following decay, determines the volume for the remainder of the length of note-on.

R (LONG=Max/SHORT=Min)


RELEASE: controls the VCA envelope's release. Release determines the time it takes for the volume to close after note off. Moving the slider toward the top results in a longer release time.

Note that the maximum length of the release phase of the envelope can be adjusted in the **TIME** section of the **SETTINGS** menu. For more detail, see that section of the manual.

LEVEL (10=Max/0=Min)

MSTER VOLUME: Controls the final volume of the layer, after any adjustments to the filter and the sine waveform. A value of 0 will reduce volume significantly, but will not result in complete silence. Moving the slider toward the top will increase the layer's volume, to a maximum of 10.

TOUCH RESPONSE

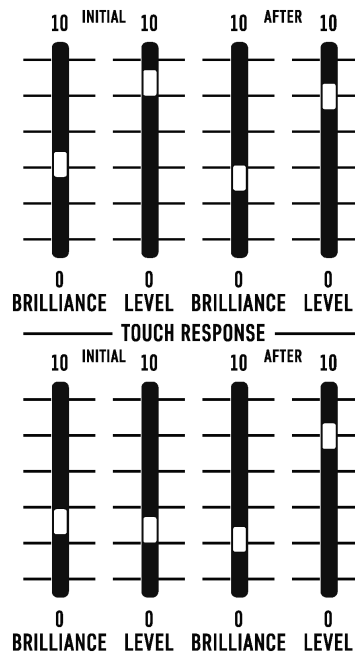

INITIAL BRILLIANCE (10=Max/0=Min)

Controls the depth that velocity will open up the filter, resulting in a brighter sound. At 0, there is no effect, and the patch will sound exactly as programmed in the VCF section. Moving the slider up (toward the maximum of 10) will result in velocity having a greater effect on the sound.

To demonstrate how harder key presses result in a brighter sound, while softer key presses result in a thinner sound, close the **HPF** and/or the **LPF** sliders and raise the **INITIAL BRILLIANCE** slider to maximum while playing with a controller that sends velocity messages.

INITIAL LEVEL (10=Max/0=Min)

Controls the depth that velocity will increase the volume of the patch. At 0, there is no effect, and the patch will sound exactly as it is programmed according to **LEVEL** in the VCA. Moving the slider up (toward the maximum of 10) will result in velocity having a greater effect on the volume.

To demonstrate how harder key presses result in a louder sound, while softer key presses result in a quieter sound, move the **VCA LEVEL** slider to 0 and raise the **INITIAL LEVEL** slider to maximum while playing with a controller that sends velocity messages.

AFTER BRILLIANCE (10=Max/0=Min)

Controls the depth that aftertouch will open up the filter, resulting in a brighter sound. At 0, there is no effect, and the patch will sound exactly as it is programmed in the VCF section. Moving the slider up (toward the maximum of 10) will result in aftertouch having a greater effect on the sound.

To demonstrate how harder key presses result in a brighter sound, while softer key presses result in a thinner sound, close the **HPF** and/or the **LPF** sliders and raise the **AFTER BRILLIANCE** slider to maximum while playing with a controller that sends aftertouch messages.


AFTER LEVEL (10=Max/0=Min)

Controls the depth that aftertouch will increase the volume of the patch. At 0, there is no effect, and the patch will sound exactly as it is programmed according to **LEVEL** in the VCA. Moving the slider up (toward the maximum of 10) will result in aftertouch having a greater effect on the volume.

To demonstrate how harder key presses result in a louder sound, while softer key presses result in a quieter sound, reduce the **VCA LEVEL** slider to 0 and raise the **AFTER LEVEL** slider to maximum while playing with a controller that sends aftertouch messages.

MASTER SYNTHESIS PARAMETERS

The master synthesis parameters are global, affecting both layers I and II. Adjustments made to these parameters can have a dramatic effect on the sound and expressivity of a patch.

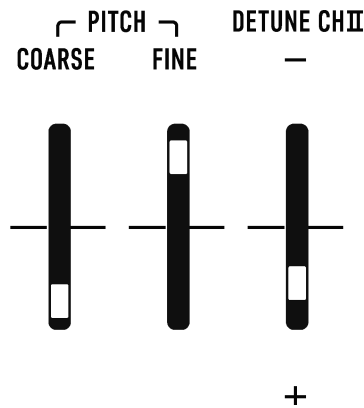

PITCH

The pitch section adjusts the oscillators' pitches, including coarse and fine master pitch adjustments, detuning for layer II to get thicker sounds, and per-layer pitch adjustment in **FEET**.

COARSE PITCH (Top=Low/Bottom=High)


Coarse pitch has a dramatic effect on the pitch of the oscillators in layers I and II. A center detent identifies center pitch. Pitch can be adjusted approximately 5 semitones in either direction, with lower pitch toward the top, and higher pitch toward the bottom.

FINE PITCH (Top=Low/Bottom=High)

Fine pitch has a minor effect on the pitch of the oscillators in layers I and II. A center detent identifies center pitch. Pitch can be adjusted approximately 1 semitone in either direction, with lower pitch toward the top, and higher pitch toward the bottom.

DETUNE CHII (Top=Low/Bottom=High)

Detune CHII has a minor effect on the pitch of the oscillator in layer II only, creating thicker sounds. A center detent identifies center pitch. Pitch can be adjusted approximately 1 semitone in either direction, with lower pitch toward the top, and higher pitch toward the bottom.

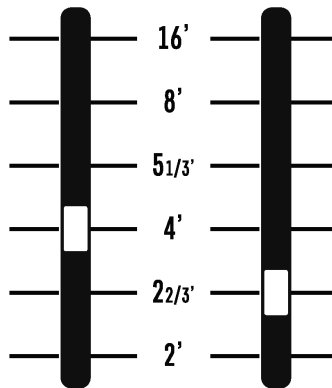I — FEET — II**FEET I (Top=Low/Bottom=High)**

Controls the pitch of the oscillator in layer I only, functioning as an octave-/fifths-switch. At the top (16'), the pitch will be lowest. At the bottom (2'), the pitch will be highest.

Even numbers represent an octave above the lower number, with 8' being 1 octave higher than 16', 4' being 1 octave higher than 8', and so on.


The 5 1/3" marker represents a perfect 5th above 8', and the 2 2/3" marker represents a perfect 5th above 4'. Use a combination of octaves and 5ths to create dyads from playing a single note.

FEET II (Top=Low/Bottom=High)

This slider operates identically to Feet I, but controls the pitch of layer II only.

SUB-OSCILLATOR

The sub oscillator functions as DECKARD'S DREAM's low-frequency oscillator (LFO). The LFO has variable speed and multiple shapes, including an external CV source (only MK1), and can modulate the following destinations: VCO pitch, VCF cutoff frequency, and VCA volume.

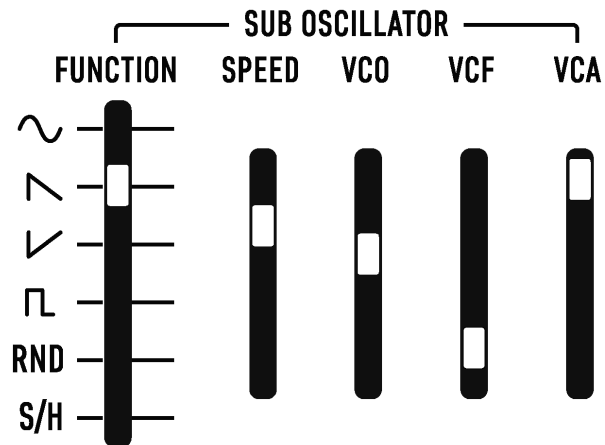

FUNCTION

Controls the shape of the LFO waveform. Available options, from top to bottom, include sine, saw, reverse saw, square, random, sample & hold, and external (MK1 only. MK1 can also be set to SAMPLE & HOLD instead of EXTERNAL in the SETTINGS menu).

(MK1 ONLY) The **EXT.** LFO waveform is determined by CV sources plugged into the **EXTERNAL** jack on the back of DECKARD'S DREAM. If no CV source is plugged in, the **EXT.** waveform will have no effect on modulation.

The depth of external CV modulation is determined by the **LEVEL** knob on the back of DECKARD'S DREAM.

Note that the voltage range of the CV source can be configured in the **EXTERNAL** section of the **SETTINGS** menu. For more information, see the **SETTINGS** section of this manual. In addition, the volume dial at the back of the unit next to the **EXTERNAL** input jack can be used to fine tune the voltage range from an external source.

SPEED (Top=Min/Bottom=Max)

Controls the frequency or speed of the LFO. The frequency is lowest at the top, and highest at the bottom.

VCO (Top=Min/Bottom=Max)

Controls the depth of the LFO's modulation of the oscillators' pitch in both layers I and II. At the top, there is no effect. At the bottom, the modulation depth is highest.

VCF (Top=Min/Bottom=Max)


Controls the depth of the LFO's modulation of VCF's cutoff frequency in both layers I and II. At the top, there is no effect. At the bottom, the modulation depth is highest.

VCA (Top=Min/Bottom=Max)

Controls the depth of the LFO's modulation of VCA's volume in both layers I and II. At the top, there is no effect. At the bottom, the modulation depth is highest.

STONE

The tone parameters offer global control over the tone of the patch. This section controls the mix of the patch between layers I and II, as well as the global filter cutoff frequency and resonance.

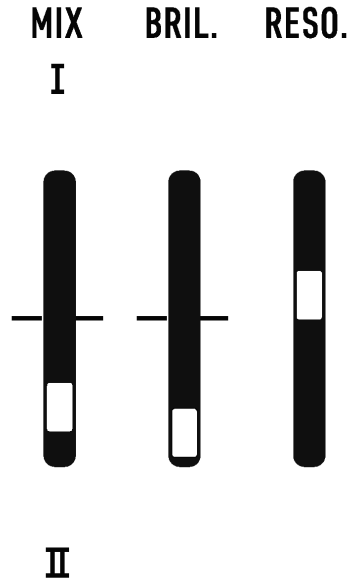

MIX I - II

Controls the balance of layers I and II in the final output mix and functions as a crossfader. This slider has a center detent, where the mix is balanced equally between layers I and II. At the top, only layer I is audible, while at the bottom, only layer II is audible.

BRIL.

Controls the master filter cutoff frequency. At the slider's center detent, there is no effect on the patch's final output, and the sound of the patch will mirror the settings of the **HPF** and **LPF** sliders in layers I and II.


Moving the slider up from the center will remove harmonics and increase the fundamental, while moving the slider down from the center detent will increase harmonics, creating a brighter sound.

Reso. (Top=Min/Bottom=Max)

Controls the master filter resonance. Adjusting resonance here will affect the filter resonance of both layers I and II. At the top, there is no effect on the patch's final output. At the bottom, resonance in the master filter output is at maximum.

TOUCH RESPONSE

The touch response parameters offer additional expressivity controls over pitch bend (via velocity messages) and the effect of aftertouch messages on the depth of sub oscillator (LFO) modulation.

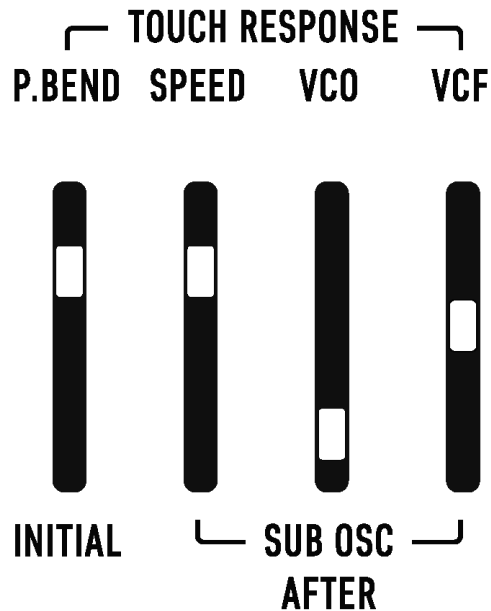

P BEND (Top=Min/Bottom=Max)

Controls the impact of velocity on pitch bend. At the top, there is no effect. Moving the slider toward the bottom will increase the depth of the pitch bend affect.

This parameter causes the pitch to begin below the note played, quickly sliding upward until the intended pitch is reached. The harder a key is struck at note on, the more the pitch will bend, with the maximum bend determined by the placement of the slider.

SPEED (Top=Min/Bottom=Max)

Controls the speed of the sub oscillator (LFO), based on velocity. At the top, there is no affect. Moving the slider toward the bottom will increase the effect of velocity on the LFO's speed. The harder a key is struck at note on, the higher the frequency of the LFO. The maximum speed is determined by the placement of the **SPEED** sliders in both the **SUB OSCILLATOR** and **TOUCH RESPONSE** sections.

VCO (Top=Min/Bottom=Max)

Controls the depth of the sub oscillator (LFO) modulation of the VCO's pitch, based on aftertouch. At the top, there is no affect. Moving the slider toward the bottom of its travel will increase the effect of aftertouch on VCO pitch modulation. The harder a key is pressed, the deeper the LFO will modulate the VCO's pitch. The maximum pitch modulation is determined by the placement of the **VCO** sliders in both the **SUB OSCILLATOR** and **TOUCH RESPONSE** sections.

VCF (Top=Min/Bottom=Max)


Controls the depth of the sub oscillator (LFO) modulation of the VCF's cutoff frequency, based on aftertouch. At the top, there is no affect. Moving the slider toward the bottom will increase the effect of aftertouch on VCF cutoff frequency. The harder a key is pressed, the deeper the LFO will modulate the VCF's cutoff frequency. The maximum cutoff frequency modulation is determined by the placement of the **VCF** sliders in both the **SUB OSCILLATOR** and **TOUCH RESPONSE** sections.

KEYBOARD CONTROL

The keyboard control parameters offer additional levels of expressivity over the filter cutoff frequency and volume of the patch, based on the range of the notes played. The controls are split between high and low notes, but there is no exact note on the keyboard that determines the divide between high and low.

Control over cutoff frequency and volume are instead distributed on a curve over the entire range of a keyboard's keys, with the effect increasing in either direction the further keys are played from the center key.

Used in combination with existing layer and master cutoff frequency and volume sliders, the keyboard control parameters can be used to emphasize notes at the bottom or top of the scale as desired.

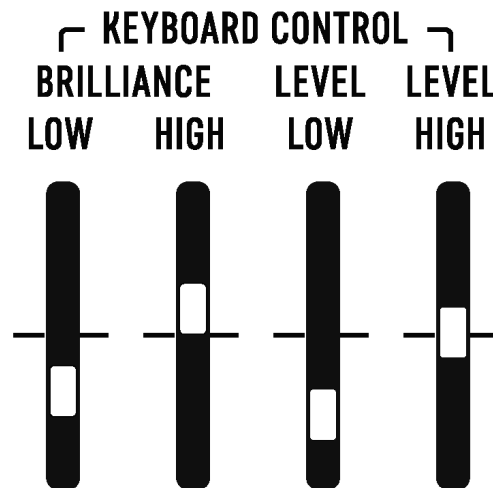

BRILLIANCE LOW

Increases or decreases emphasis in the filter cutoff frequency for notes below the center key. At the slider's center detent, there is no effect on the patch.

Moving the slider up will decrease emphasis for notes below the center key, effectively closing the filter further as lower notes are played.

Moving the slider toward the bottom will increase emphasis for notes below the center key, effectively opening the filter further as lower notes are played.

BRILLIANCE HIGH

This parameter increases or decreases emphasis in the filter cutoff frequency for notes above the center key. At the slider's center detent, there is no effect on the patch.

Moving the slider up toward the top of its travel will decrease emphasis for notes above the center key, effectively closing the filter further as higher notes are played.

Moving the slider down toward the bottom of its travel will increase emphasis for notes above the center key, effectively opening the filter further as higher notes are played.

LEVEL LOW

Increases or decreases volume for notes below the center key. At the slider's center detent, there is no effect on the patch.

Moving the slider toward the top will decrease volume for notes below the center key, effectively decreasing volume further as lower notes are played.

Moving the slider down will increase volume for notes below the center key, effectively increasing volume further as lower notes are played.

LEVEL HIGH


Increases or decreases volume for notes above the center key. At the slider's center detent, there is no effect on the patch.

Moving the slider up will decrease volume for notes above the center key, effectively decreasing volume further as higher notes are played.

Moving the slider down will increase volume for notes above the center key, effectively increasing volume further as higher notes are played.

PORTAMENTO / GLISSANDO

The portamento/glissando parameters control how pitch transitions between notes or chords. A slider and switch work together in tandem to create variations in pitch transition.

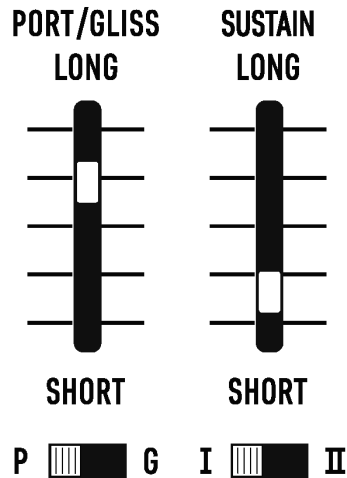

Portamento is a smooth, gliding transition between pitches. Glissando is a stepped transition between notes, increasing or decreasing pitch from the previous note in $\frac{1}{2}$ steps until the final pitch is reached.



PORTAMENTO/GLISSANDO SELECTOR SWITCH

This 3-setting switch determines how pitch will transition between notes.

Left (P or PORTAMENTO): pitch glides smoothly between notes or chords, with the length of the transition determined by the **LONG/SHORT** slider.

Center: Pitch transitions immediately between notes with no glide or stepping.

Right (G or GLISSANDO): pitch transitions between notes or chords in a stepped fashion, increasing or decreasing in $\frac{1}{2}$ note steps until the final pitch is reached, with the length of the transition time determined by the **LONG/SHORT** slider.

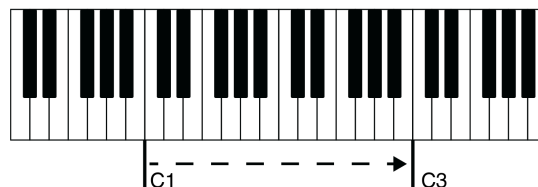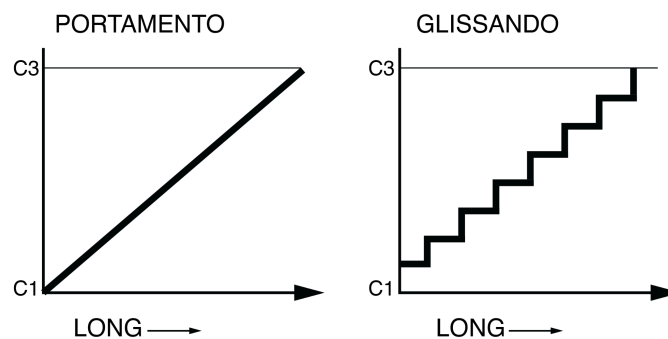

LONG/SHORT slider (Top=Max/Bottom=Min)

Controls the time it takes for pitch to transition from one note or chord to the next. At the bottom, there will be a barely noticeable effect on pitch transition. At the top, the transition time is at maximum.

Increasing the distance between notes will also increase transition time. With the slider at the top, it takes approximately 10 seconds to transition from the lowest note to the highest note (or vice versa).

SUSTAIN (MK2 Only)

A switch between Sustain Mode I and II (In MK1, can be configured in SETTINGS -> VOICE menu), a global Sustain Slider (controllable by CC messages)

SUSTAIN slider (Top=LONG/Bottom=SHORT)

Master sustain control which can be used to quickly change the release for both layers. Functions independently of the VCA release controls.

SUSTAIN switch I/II

Sets playback mode to determine how the sustain of notes or chords is handled when new notes or chords are played.

TONE SELECTOR

The tone selector buttons and display select, save, and store patches, as well as change DECKARD'S DREAM's per-patch and global settings.

The functions of the tone selector section are covered elsewhere in this manual:

- For details on changing, saving, and editing patches, see the **BANK & PRESET SELECTION** section of this manual.
- For details on editing DECKARD'S DREAM's settings, see the **SETTINGS MENU** section of this manual.



TONE SELECTOR

There are six buttons in the **TONE SELECTOR** section. On the panel, they are labeled as **UP**, **DOWN**, **ENTER**, **CANCEL**, **SHIFT**, and **PANEL** (PANEL button is not on MK1 units).

For the purposes of this manual, the **UP**, **DOWN**, **ENTER**, and **CANCEL** buttons will be described in terms of their panel label as well as the variant name on the display, as button functions may change depending on the subsection of the selected settings.

Button presses will be labeled in the following format: **PHYSICAL BUTTON NAME (DISPLAY BUTTON NAME)**.

For example, from the patch selector screen, pressing the **SHIFT** button causes the display name of the **CANCEL** button to be re-labelled **STNG**, for settings. This manual will describe this in the format of **CANCEL (STNG)**.

VOLUME KNOB

Controls the final output volume of a patch, both of the headphone amplifier on the front panel, and the **AUDIO OUTPUT** jack on the back of the synth. Fully counter-clockwise, the volume is at minimum, and DECKARD'S DREAM is not audible. Volume reaches maximum at fully clockwise.

Before plugging DECKARD'S DREAM into an amplifier or mixer, always turn the volume knob fully counter-clockwise to minimum, then slowly increase volume as necessary until the desired level is reached.

SETTINGS MENU

DECKARD'S DREAM's settings menu controls not only the global settings of DECKARD'S DREAM, but also a subset of per-patch settings not accessible elsewhere on the front panel. Each subsection of the menu will be labeled **GLOBAL** if its effect spans across all banks and patches, or **PER-PATCH** if it affects only the current patch. For **PER-PATCH** settings, remember to save a patch after adjustments in order to retain the new settings.

ACCESSING THE SETTINGS MENU

To access the settings menu, hold **SHIFT** and press **CANCEL (STNG)**.

In the settings menu, use the **UP** and **DOWN** buttons to navigate through the settings menu sections. Press **ENTER (RUN)** to select a section, and **CANCEL (BACK)** to return to the patch selection screen.

From within a menu section, press **CANCEL (BACK)** to return to the main settings menu.

RETUNE

RETUNE quickly retunes DECKARD'S DREAM's oscillators. Selecting this section of the settings menu displays the following message: "TO START RETUNE PRESS ENTER." Press **CANCEL (BACK)** to cancel the retuning process and returns to the main settings page. Press **ENTER** to start the retune process. The display will read: "RECALIBRATION IN PROCESS." Retuning takes approximately 10-20 seconds. When complete, the display will update to "DONE." Press **CANCEL (OK)** to return to the patch selection screen.

MIDI

The **MIDI** settings section changes how a MIDI sequencer or controller interacts with DECKARD'S DREAM.

MODE (GLOBAL)

Determines how DECKARD'S DREAM interacts with a MIDI controller, based on the controller's capabilities. There are 3 settings: **CHANNEL PRESSURE**, **POLY AFTERTOUCH**, and **MPE**.

- For basic MIDI controllers that are not capable of polyphonic aftertouch, select **CHANNEL PRESSURE**.
- For MIDI controllers that are capable of polyphonic aftertouch, select **POLY AFTERTOUCH**.
- For MIDI Polyphonic Expression (MPE) controllers such as Roli Seaboard, Roger Linn Linnstrument, or Haken Continuum, select **MPE**.

Press **UP (↑)** or **DOWN (↓)** to select the appropriate option for the connected controller, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to **MIDI MODE** settings and return to the **MIDI** settings menu.

CHANNEL (GLOBAL)

Selects the MIDI channel DECKARD'S DREAM will receive. The content of this menu section will change, depending on the selected controller type.

If **CHANNEL PRESSURE** or **POLY AFTERTOUCH** are selected in **MODE**, any of the 16 MIDI channels may be selected. The display will update to the currently selected MIDI channel (by default, channel 1). Press **UP (↑)** or **DOWN (↓)** to select a new channel, then press **ENTER (SAVE)** to save the selection.

If **MPE** is selected in **MODE**, only MIDI channels 1-8 can be selected. The MPE standard uses an individual MIDI channel for each voice in order to allow for polyphonic velocity, aftertouch,

and other expressivity controls per voice. DECKARD'S DREAM assigns the channels above this base channel to each of its 8 voices. The master MIDI channel selected (1-8) assigns the master channel DECKARD'S DREAM will receive. Press **UP** (↑) or **DOWN** (↓) to select a new channel, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel any changes to **CHANNEL** settings and return to the **MIDI** settings menu.

OUT CHANNEL (GLOBAL)

Selects the MIDI channel (1-16) which DECKARD'S DREAM will transmit on.

CC RECEIVE (GLOBAL)

CC RECEIVE determines whether DECKARD'S DREAM will accept incoming continuous control (CC) messages from the connected sequencer or controller.

- **OFF** ignores all incoming CC messages.
- **ON** allows DECKARD'S DREAM to be modulated by external CC messages from the connected MIDI sequencer or controller.

CC74 REPLACE (GLOBAL)

Some MPE controllers, such as the Roli Seaboard series and the Haken Continuum, allow additional expressivity by moving fingers up and down the vertical surface of the keys. These movements are translated to continuous control messages on channel 74, which cannot be changed on the controller.

For this reason, DECKARD'S DREAM's firmware can select a new destination for CC74, in order to take advantage of the vertical dimension of MPE controller series' keys. Available destinations include:

- LFO SPEED (CC 105)
- LFO TO VCO (CC106)
- LFO TO VCF (CC 107)
- LFO TO VCA (CC 108)
- BRILLIANCE (CC109)
- LPF A (CC 048)
- LPF B (CC 075)
- HPF A (CC 046)
- HPF B (CC 073)

SLIDERS (GLOBAL)

Changes DECKARD'S DREAM's behavior when the physical position of a switch or slider is different than the value stored in the current saved patch. Available options are **PICK UP**, **MERGE**, and **INSTANT**.

- **PICK UP**: Moving sliders has no effect until the slider position moves through the current patch's stored value. Once the slider has moved through the stored value, changes will be audible based on the slider's actual position.
- **MERGE**: Moving sliders has an immediate effect, but will not immediately reflect the physical slider position. In effect, the stored value of the current patch and the current slider position will meet each other gradually, eventually merging at the slider position.
- **INSTANT**: Moving sliders has an instant effect. (This is much more responsive, but not recommended for use in a live performance setting.)

CC (GLOBAL): Changes DECKARD'S DREAM's behavior when a MIDI CC (Continuous Control) signal is different from the value stored in the current saved patch. Options are **PICK UP**, **MERGE**, and **INSTANT**.

- **PICK UP**: Incoming CC has no effect until its position moves through the current patch's stored value. Once the slider has moved through the stored value, changes will occur based on the CC's actual value.
- **MERGE**: Incoming CC has an immediate effect, but will not instantly reflect its physical position. In effect, the stored value of the current patch and the current position will meet each other gradually, eventually merging. Once the values merge, changes will occur based on the parameter's actual value.
- **INSTANT**: Incoming CC has an instant effect. (This is much more responsive, but not recommended for live settings.)

MOD WHEEL DESTINATION (PER-PATCH)

Determines what continuous control (CC) message the connected controller's mod wheel will modulate. Available destinations include:

- LFO DEPTH - VCO (CC 106)
- LFO DEPTH - VCF (CC 107)
- LFO DEPTH - VCA (CC 108)
- BRILLIANCE (CC 109)
- PORTAMENTO LEVEL (CC 005)
- PWM SPEED 1 (CC 040)
- PWM SPEED 2 (CC 067)
- PWM SPEED 1+2 (CC 040 and CC 067)
- DETUNE (CC 095)
- FEET 1 (CC 102)
- FEET 2 (CC 103)
- Noise 1
- Noise 2

Press **UP** (↑) or **DOWN** (↓) to select the preferred mod wheel destination, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to **MOD WHEEL DESTINATION** settings and return to the **MIDI** settings menu.

MOD WHEEL POLARITY (PER-PATCH)

MOD WHEEL POLARITY determines whether use of the connected controller's mod wheel increases or decreases the value of the destination it has been sent to in the **MOD WHEEL DESTINATION** setting.

- **POSITIVE:** adds to the value of the CC destination as use of the mod wheel increases.
- **NEGATIVE:** decreases the value of the CC destination as use of the mod wheel increases.

Press **UP** (↑) or **DOWN** (↓) to select the preferred mod wheel polarity, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to **MOD WHEEL POLARITY** settings and return to the **MIDI** settings menu.

PC SEND (GLOBAL): Selects whether DECKARD'S DREAM sends Program Change messages from its MIDI OUT when scrolling between patches. Options are ON/OFF.

VOICE

VOICE changes how DECKARD'S DREAM assigns and manages its 8 analogue voices.

MODE (PER-PATCH)

VOICE MODE determines how DECKARD'S DREAM assigns its voices as keys are played. Available options are **MONOPHONIC**, **POLYPHONIC**, and **UNISON**.

- **MONOPHONIC:** DECKARD'S DREAM becomes a monophonic synthesizer, using 1 of its 8 analogue voices. Pressing a new key will override the previous note, with the most recently played note taking priority.
- **POLYPHONIC:** DECKARD'S DREAM becomes a polyphonic synthesizer, allowing up to 8 of its analogue voices to be played simultaneously (depending on the **NUMBER OF VOICES** setting under the **VOICE** menu). Select this mode to play chords or simultaneously overlapping notes.
- **UNISON:** DECKARD'S DREAM becomes a monophonic synthesizer, assigning up to 8 analogue voices to a single note (depending on the **NUMBER OF VOICES** setting under the **VOICE** menu). Pressing a new key will override the previous note, with the most recently played note taking priority. Select this mode for monophonic behavior with the thickest sound possible.

Press **UP** (↑) or **DOWN** (↓) to select the preferred voice mode, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to **MODE** settings and return to the **VOICE** settings menu.

NUMBER OF VOICES (GLOBAL)

NUMBER OF VOICES determines the maximum number of voices available in **POLYPHONIC** mode. This setting does not affect the **MONOPHONIC** or **UNISON** modes, as they are limited to 1 voice. Available options are 8 (the default value) to 1.

Press **UP** (↑) or **DOWN** (↓) to select the preferred maximum number of voices, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to **NUMBER OF VOICES** settings and return to the **VOICE** settings menu.

DETUNE (PER-PATCH)

DETUNE adds pitch drift to DECKARD'S DREAM's VCOs. DECKARD'S DREAM is a modern synth with stable tuning, but it may be desirable to simulate the randomly detuned nature of classic analogue synths to create thicker sounds. Pitch drift can be introduced in increments of 1/10th of a Hz (or 1/10th of one frequency cycle per second), with a maximum of 3.0 Hz.

Detuning has varying results depending on the **VOICE MODE** setting:

- **MONOPHONIC:** The current note is simply detuned from its center pitch, with the amount of detuning from central pitch determined by the Hz setting.
- **POLYPHONIC:** Detuning introduces random pitch fluctuations per voice. At lower detune settings, detuning will introduce a warble into chords, while extreme detuning settings will result discordant sounds barely recognizable as the chord being played.
- **UNISON:** Detuning will create an even thicker sound than standard **UNISON** mode, especially useful for bass patches. At lower detune settings, the sound becomes slightly thicker, while extreme detuning settings result in a swarm-like sound.

Press **UP** (↑) or **DOWN** (↓) to select the preferred amount of detuning, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to **DETUNE** settings and return to the **VOICE** settings menu.

CARDS PER VOICE (GLOBAL)

CARDS PER VOICE determines how many of DECKARD'S DREAM's voice cards are dedicated to a single voice. Increasing the number of voice cards per voice results in a thicker sound. Available options are **1** and **2**.

This setting affects only the **MONOPHONIC** and **POLYPHONIC** settings in the **VOICE MODE** settings section.

- **1**: Assigns 1 voice card to 1 voice, for a thinner sound per voice. This allows up to 8 notes to be played simultaneously in **POLYPHONIC** mode.
- **2**: Assigns 2 voice cards to 1 voice, for a thicker sound per voice. This allows up to 4 notes to be played simultaneously in **POLYPHONIC** mode.

Press **UP (↑)** or **DOWN (↓)** to select the preferred number of cards per voice, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to **CARDS PER VOICE** settings and return to the **VOICE** settings menu.

HPF MOD (GLOBAL)

HPF MOD inverts the polarity of the envelope for the high-pass filter. Available options include **NORMAL** and **INVERTED**.

- **NORMAL**: The high-pass filter envelope is positive, and responds in the opposite way of the low-pass filter.
- **INVERTED**: The high-pass filter's envelope is inverted, and will respond the same way as the low-pass filter.

Press **UP (↑)** or **DOWN (↓)** to select the preferred **HPF MOD** mode, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to **HPF MOD** settings and return to the **VOICE** settings menu.

TIME

TIME adjusts the maximum length of LFO cycles, pulse width cycles, and envelope phases, as well as the characteristics of the LFO.

LFO MAX (PER-PATCH)

LFO MAX controls the maximum frequency of the **SUB OSCILLATOR**. This determines the value of the bottom of the **SUB OSCILLATOR SPEED** slider. The default value is 25.0 Hz. The allowable range is 10.0 Hz to 45.0 Hz.

Press **UP (↑)** or **DOWN (↓)** to select the desired frequency, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to **LFO MAX** settings and return to the **TIME** settings menu.

LFO MIN (PER-PATCH)

LFO MIN controls the minimum frequency of the **SUB OSCILLATOR**. This determines the value of the top of the **SUB OSCILLATOR SPEED** slider. The default value is 0.7 Hz. The allowable range is 0.1 Hz to 5.0 Hz.

Press **UP** (↑) or **DOWN** (↓) to select the desired frequency, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to **LFO MIN** settings and return to the **TIME** settings menu.

PWM MAX (PER-PATCH)

PWM MAX controls the maximum frequency of the square wave oscillator's pulse-width modulation. This determines the value of the top of the **PWM** slider. The default value is 70.0 Hz. The allowable range is 10.0 Hz to 100.0 Hz.

Press **UP** (↑) or **DOWN** (↓) to select the desired frequency, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to **PWM MAX** settings and return to the **TIME** settings menu.

PWM MIN (PER-PATCH)

PWM MIN controls the minimum frequency of the square wave oscillator's pulse-width modulation. This determines the value of the bottom of the **PWM** slider. The default value is 0.7 Hz. The allowable range is 0.1 Hz to 5.0 Hz.

Press **UP** (↑) or **DOWN** (↓) to select the desired frequency, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to **PWM MIN** settings and return to the **TIME** settings menu.

PWM MODE (GLOBAL)

PWM MODE controls how the Pulse Width Modulation (PWM) LFOs behaves. Available options include **SEPARATE** and **SYNC**.

- **SEPARATE**: The PWM LFOs of layers I and II behave independently of each other. Speed and depth are controlled by the respective **SPEED** and **PWM** sliders of layers I and II.
- **SYNC**: The PWM LFOs are synchronized and run at the same speed. Speed is controlled by the **SPEED** slider of layer I. The Pulse Width Modulation (PWM) depth, however, is still controlled independently by the PWM sliders of layers I and II.

Press **UP** (↑) or **DOWN** (↓) to select the desired **PWM MODE**, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to **PWM MODE** settings and return to the **TIME** settings menu.

ATTACK TIME (PER-PATCH)

ATTACK TIME sets the maximum length of the attack stage of the VCF and VCA's envelopes. The default value is 1.0 seconds. The allowable range is 1.0 seconds to 100.0 seconds. From 1.0 to 10.0 seconds, values can be incremented in units of 1 second. From 10.0 seconds to 100.0 seconds, values can be incremented in units of 10 seconds.

Press **UP** (↑) or **DOWN** (↓) to select the desired number of seconds, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to **ATTACK TIME** settings and return to the **TIME** settings menu.

DEC/REL TIME (PER-PATCH)

DEC/REL TIME sets the maximum length of the decay and release stages of the VCF and VCA's envelopes. The default value is 15.0 seconds. The allowable range is 15.0 seconds to 150.0 seconds. Values can be incremented in units of 1 second.

Press **UP** (↑) or **DOWN** (↓) to select the desired number of seconds, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to the **DEC/REL TIME** settings and return to the **TIME** settings menu.

LFO DEPTH (PER-PATCH)

LFO DEPTH controls the maximum depth of **SUB OSCILLATOR** modulation, creating more dramatic effects with the **SUB OSCILLATOR VCO**, **VCF**, and **VCA** sliders. Available options include **CLASSIC** and **EXTENDED**.

- **CLASSIC (default)**: Has a shallower level of maximum **SUB OSCILLATOR** modulation depth.
- **EXTENDED**: Increases the maximum modulation depth of the **SUB OSCILLATOR** beyond what is possible with **CLASSIC**.

Press **UP** (↑) or **DOWN** (↓) to select the desired **LFO DEPTH** mode, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to **LFO DEPTH** settings and return to the **TIME** settings menu.

LFO MODE (GLOBAL)

LFO MODE controls the **SUB OSCILLATOR**'s behavior when multiple notes or chords are played. Available options include **POLY** and **MONO**.

- **POLY**: LFO cycles are created independently per note. If multiple notes are played at different times, their LFOs will cycle independently. This setting will have no effect if DECKARD'S DREAM is in **MONOPHONIC** or **UNISON** voice mode.
- **MONO**: LFO cycles are synced across all notes. The cycle phase is determined by the first note pressed in a chord.

Press **UP** (↑) or **DOWN** (↓) to select the desired **LFO MODE**, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to **LFO MODE** settings and return to the **TIME** settings menu.

RESET TO DEFAULTS (GLOBAL)

RESET TO DEFAULTS resets all **TIME** settings back to their default values. Selecting this section of the **TIME** menu displays the following message: "TO RESET TO FACTORY DEFAULTS PRESS ENTER."

Press **CANCEL (BACK)** to cancel the reset process and return to the main **TIME** settings page. Press **ENTER** to start the reset process. The display will read: "CONFIRM RESET." Press **ENTER (OK)** to proceed with reset, or press **CANCEL (BACK)** to return to the main **TIME** settings screen.

MICROTUNING

MICROTUNING enables or disables microtuning. Available options are **ON** and **OFF**.

- **ON**: Microtuning is enabled.
- **OFF**: Microtuning is disabled.
- **TUNING PROGRAM**: Selects which imported microtuning is enabled.

ODDSOUND INSTRUCTIONS

OddSound's MTS-ESP MIDI CLIENT VST or AU plugin can send .mts files directly from your DAW to your DECKARD'S DREAM.

Once the software is installed, connect DECKARD'S DREAM to the computer via USB or DIN midi. Make sure DECKARD'S DREAM or the correct MIDI port is enabled in your computer or DAW's MIDI settings.

1. Open MTS-ESP MIDI Client plugin in your DAW. In the MTS-ESP MIDI Client plugin, under **Method**, select **MTS SYSEX**. Under Output, select **ISE-NIN**, or if using DIN MIDI and a MIDI to USB interface select the correct port.
2. Select the .mts file to be sent and click **Send Dump**. The desired .mts file should now be loaded into **ISE-NIN**.
3. Use the encoder to select the desired setting, then press **ENTER (SAVE)** to save the selection.

KEYBOARD

KEYBOARD controls the pitchbend range, tracking width, and middle octave of the connected MIDI controller.

PITCHBEND RANGE (GLOBAL)

PITCHBEND RANGE sets the maximum pitchbend range of the connected controller. The default setting is 3 semitones. The allowable range is 1 to 99 semitones.

Press **UP** (↑) or **DOWN** (↓) to select the desired number of semitones, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to **PITCHBEND RANGE** settings and return to the **KEYBOARD** settings menu.

TR PITCHBEND RANGE (GLOBAL)

TR PITCHBEND RANGE sets the range which the TOUCH RESPONSE section's P.BEND responds to Velocity. The default setting is 1 semitones. The allowable range is 1 to 20 semitones.

Press **UP** (↑) or **DOWN** (↓) to select the desired number of semitones, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to **PITCHBEND RANGE** settings and return to the **KEYBOARD** settings menu.

TRACKING WIDTH (GLOBAL)

TRACKING WIDTH sets the connected controller's octave range that can modulate **BRILLIANCE** and **LEVEL** in the **KEYBOARD CONTROL** master parameters section of the front panel.

Keyboard tracking on modern synthesizers typically controls the amount of keyboard tracking of the VCF and VCA. DECKARD'S DREAM allows for more complex tracking along the entire keyboard range, up to 10 octaves in total, or a smaller range.

Setting **TRACKING WIDTH** to lower values, such as 3 octaves, limits the range of tracking across the keyboard. Tracking begins at the center octave selected in the **MIDDLE OCTAVE** setting. In the example of 3 octaves, the Low and High VCF and VCA slider settings still take effect, but across a smaller range of the keyboard, meaning that if a scale is played in the range of 3 octaves (2 octaves up and 1 down) from the middle octave, the VCF cutoff and VCA level will change more with each note played.

The available range includes 1 to 10 octaves. The default value is 4 octaves.

Octaves are represented on the display via a series of 10 blocks. At 1 octave, only the octave selected as the middle octave in the **MIDDLE OCTAVE** setting will be highlighted. Increasing the number of octaves from 1 will add octaves above and below the middle octave in an alternating fashion.

Press **UP** (↑) or **DOWN** (↓) to select the desired number of octaves, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to **TRACKING WIDTH** settings and return to the **KEYBOARD** settings menu.

MIDDLE OCTAVE (GLOBAL)

MIDDLE OCTAVE selects the center octave that the **TRACKING WIDTH** uses to determine its starting point. Note that if **TRACKING WIDTH** is set to 10 octaves, **MIDDLE OCTAVE** will have no effect.

Press **UP** (↑) or **DOWN** (↓) to select the desired center octave, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to **MIDDLE OCTAVE** settings and return to the **KEYBOARD** settings menu.

AMOUNT (GLOBAL): Changes the parameter range of Deckard'S Dream's master **KEYBOARD CONTROL** section.

- **NORMAL**: Controls function as they would on the CS-80
- **EXTENDED**: Controls have an extended range allowing a wider minimum and maximum effect.

PRESET VOLUME (PER-PATCH)

PRESET VOLUME adjusts the gain of an individual patch, allowing for normalization of volumes between patches. The available range is -6db to +6db.

Press **UP** (↑) or **DOWN** (↓) to select the desired gain level, then press **ENTER (SAVE)** to save the selection.

Press **CANCEL (CNCL)** at any time to cancel changes to **PRESET VOLUME** settings and return to the main settings menu.

CALIBRATION

CALIBRATION calibrates slider positions, tunes oscillator voices as a group or individually, enables or disables microtuning, and debugs issues with DECKARD'S DREAM.

SLIDERS (GLOBAL)

SLIDERS calibrates the center position of sliders with a center detent. Selecting the **SLIDERS** calibration setting updates DECKARD'S DREAM's display to read, "SET CENTER DETENT SLIDERS TO MIDDLE AND PRESS ENTER."

All sliders with center detents are found in the Master Synthesis Parameters section of DECKARD'S DREAM. These sliders include:

- PITCH: COARSE
- PITCH: FINE
- DETUNE CHII
- MIX I/II
- MASTER BRILLIANCE
- KEYBOARD CONTROL: BRILLIANCE LOW
- KEYBOARD CONTROL: BRILLIANCE HIGH
- KEYBOARD CONTROL: LEVEL LOW
- KEYBOARD CONTROL: LEVEL HIGH

Ensure that all of the above sliders are in their center detent position before running calibrations, as the behavior of the sliders will be altered if their center position is relocated.

Press **CANCEL (BACK)** to cancel the slider calibration process and return to the **CALIBRATION** settings page.

Press **ENTER** to start the slider calibration process. Calibration occurs instantly. When complete, the screen displays "DONE." Press **CANCEL (OK)** to return to the **CALIBRATION** settings screen.

OSCILLATORS (GLOBAL)

OSCILLATORS calibrates the oscillators of all voices simultaneously or on a per-voice basis. Note: For best results, allow the unit to warm up for at least 20 minutes before performing this procedure.

To tune all voices simultaneously, select **TUNE ALL VOICES**. The display will read "TO START AUTOTUNE PRESS ENTER."

Press **CANCEL (BACK)** to cancel the oscillator calibration process and return to the **CALIBRATION** settings page.

Press **ENTER** to start the oscillator calibration process. The display will read: "OSC 1A TUNING," and displays a progress bar. Calibration takes approximately 1-3 minutes per voice and proceeds from OSC 1A to OSC 1B to OSC 2A and so on. Full calibration of all oscillators takes approximately 10-15 minutes. When complete, the screen displays "DONE." Press **CANCEL (OK)** to return to the **CALIBRATION** settings screen.

To tune an individual voice, select the desired voice number and press **ENTER**.

SCREENSAVER

Controls the time it takes for DECKARD'S DREAM to enter its Screensaver state. Options are:

- NEVER
- 5 MINUTES
- 10 MINUTES
- 30 MINUTES
- 1 HOUR

ABOUT

ABOUT displays the following information about the device:

- Hardware Revision Number
- Firmware Revision Number
- Black Corporation Copyright Information

Press **CANCEL (BACK)** to return to the main settings menu.

RESET SETTINGS (GLOBAL)

RESET SETTINGS reverts all DECKARD'S DREAM settings to their default. Selecting this will display the following message: "TO RESET SETTINGS PRESS ENTER."

Press **CANCEL (BACK)** to cancel the reset process and return to the main settings page.

Press **ENTER** to start the reset process. The display will now read: "CONFIRM RESET." Press **ENTER (OK)** again to confirm, or press **CANCEL (BACK)** to cancel the reset process.

Press **ENTER (OK)** a second time to start the reset process. Reset takes place immediately and returns all settings to their default values.

FIRMWARE UPDATE PROCEDURE

There will be occasions when you might need to update the firmware of your DECKARD'S DREAM. It is very important to follow these instructions carefully in order to avoid turning your synthesizer into a brick.

Firstly, MK1 units will have firmware in the for 1.x.x, while MK2 units will be 2.x.x. Do not use the wrong files, they will not work and could damage your unit.

In most cases, updating the firmware, or loading banks into DECKARD'S DREAM is simple, but for versions of DECKARD'S DREAM firmware 1.3.0 and lower, please contact us to walk you through the process of updating. There are some potential pitfalls when updating older units.

For all MK2 and higher versions of MK1:

1. Power on DECKARD'S DREAM while holding SHIFT.
2. Connect your unit to a computer. It will appear on your desktop as a drive.
3. Drop the new firmware (and sound banks if you are adding any).
4. Eject the drive.
5. Restart your unit, watch it load the updated firmware, and restart itself.

MIDI CC CHART

MIDI CC	RANGE	FUNCTION
CC0	0-8	BANK SELECT
CC1	0-127	MODULATION WHEEL
CC5	0-127	SLIDER PORT / GLIS
CC8	0-64-127	SLIDER MIX I / II
CC9	0-64 / 65-127	SUSTAIN SWITCH
CC10	0-127	SUSTAIN SLIDER
CC32	0-127	SLIDER DETUNE
CC40	0-127	SLIDER PWM SPEED A
CC41	0-127	SLIDER PWM A
CC42	0-127	SLIDER PW A
CC43	0-64 / 65-127	SWITCH SQUARE A
CC44	0-64 / 65-127	SWITCH SAW A
CC45	0-127	SLIDER NOISE A
CC46	0-127	SLIDER VCF HPF A
CC47	0-127	SLIDER VCF RESH A
CC48	0-127	SLIDER VCF LPF A
CC49	0-127	SLIDER VCF RESL A
CC50	0-127	SLIDER VCF IL A
CC51	0-127	SLIDER VCF AL A
CC52	0-127	SLIDER VCF ATTACK A
CC53	0-127	SLIDER VCF DECAY A
CC54	0-127	SLIDER VCF RELEASE A
CC55	0-127	SLIDER VCFLEVEL A
CC56	0-127	SLIDER SINE A
CC57	0-127	SLIDER VCA ATTACK A
CC58	0-127	SLIDER VCA DECAY A
CC59	0-127	SLIDER VCA SUSTAIN A
CC60	0-127	SLIDER VCA RELEASE A
CC61	0-127	SLIDER VCA LEVEL A

CC62	0-127	SLIDER TR INIT BR A
CC63	0-127	SLIDER TR INIT LVL A
CC64	0-127	SUSTAIN PEDAL
CC65	0-127	SLIDER TR AFTER BR A
CC66	0-127	SLIDER TR AFTER LVL A
CC67	0-127	SLIDER PWM SPEED B
CC68	0-127	SLIDER PWM B
CC69	0-127	SLIDER PW B
CC70	0-64 / 65-127	SWITCH SAW B
CC71	0-64 / 65-127	SWITCH SQUARE B
CC72	0-127	SLIDER NOISE B
CC73	0-127	SLIDER VCF HPF B
CC74	0-127	BRILLIANCE
CC75	0-127	SLIDER VCF LPF B
CC76	0-127	SLIDER VCF RESL B
CC77	0-127	SLIDER VCF IL B
CC78	0-127	SLIDER VCF AL B
CC79	0-127	SLIDER VCF ATTACK B
CC80	0-127	SLIDER VCF DECAY B
CC81	0-127	SLIDER VCF RELEASE B
CC82	0-127	SLIDER VCFLEVEL B
CC83	0-127	SLIDER SINE B
CC84	0-127	SLIDER VCA ATTACK B
CC85	0-127	SLIDER VCA DECAY B
CC86	0-127	SLIDER VCA SUSTAIN B
CC87	0-127	SLIDER VCA RELEASE B
CC88	0-127	SLIDER VCA LEVEL B
CC89	0-127	SLIDER TR INIT BR B
CC90	0-127	SLIDER TR INIT LVL B
CC91	0-127	SLIDER TR AFTR BR B
CC92	0-127	SLIDER TR AFTR LVL B
CC93	0-64-127	SLIDER COARSE

CC94	0-64-127	SLIDER FINE
CC102	0-21/22-42/43-63/64-84/85-105/106-127	SLIDER FEET1
CC103	0-21/22-42/43-63/64-84/85-105/106-127	SLIDER FEET2
CC104	0-21/22-42/43-63/64-84/85-105/106-127	SLIDER SUBOSC FUNC
CC105	0-127	SLIDER SUBOSC SPEED
CC106	0-127	SLIDER SUBOSC VCO
CC107	0-127	SLIDER SUBOSC VCF
CC108	0-127	SLIDER SUBOSC VCA
CC109	0-64-127	SLIDER BRIL
CC110	0-127	SLIDER RESO
CC111	0-127	SLIDER TR PITCHBEND
CC112	0-127	SLIDER TR SPEED
CC113	0-127	SLIDER TR VCO
CC114	0-127	SLIDER TR VCF
CC115	0-64-127	SLIDER KBRD BRIL LOW
CC116	0-64-127	SLIDER KBRD BRIL HIGH
CC117	0-64-127	SLIDER KBRD LVL LOW
CC118	0-64-127	SLIDER KBRD LVL HIGH
CC119	0-127	SLIDER VCF RESH B

Roman Filippov
Bob Akber
Aleksandr Kholenko

Black Corporation G.K., All Rights Reserved 2024.

